


IS TOW POWER SUPPLIES –
S ARE OFF BEFORE SERVICING

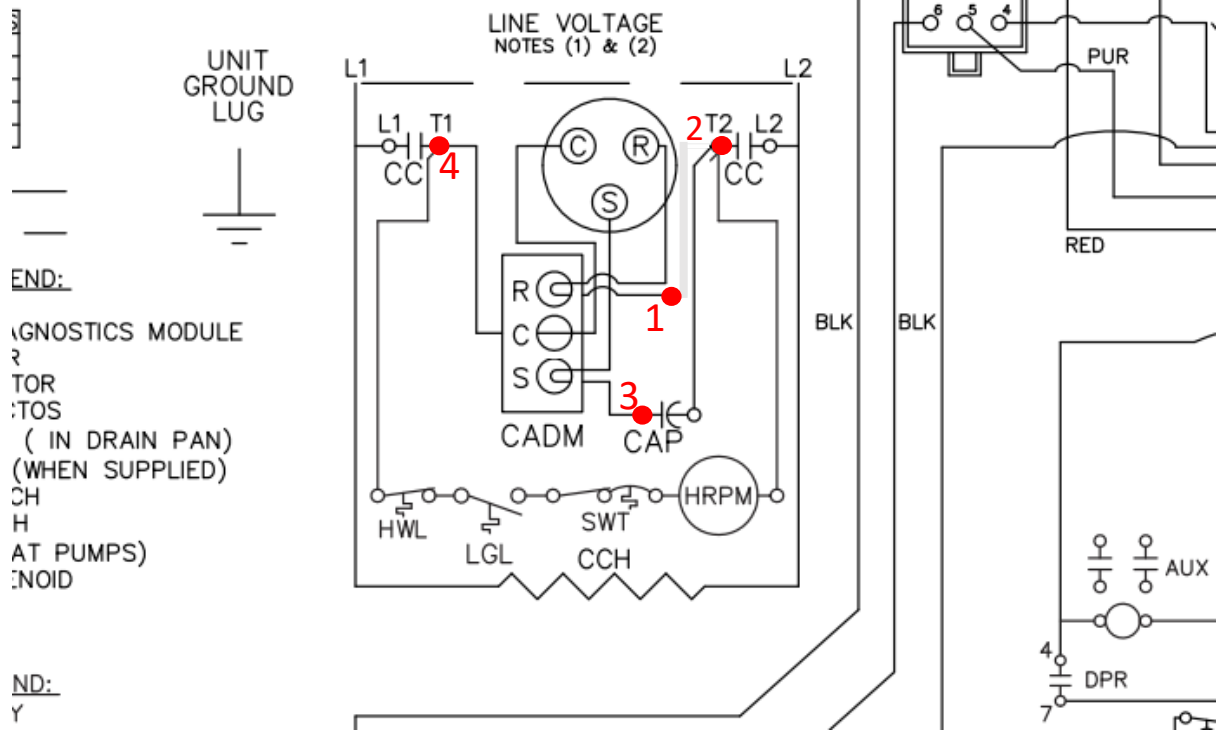

END:

AGNOSTICS MODULE
R
TOR
:TOS
(IN DRAIN PAN)
(WHEN SUPPLIED)
CH
H
AT PUMPS)
:NOID

ND:

Y

	NuStart
1	RUN
N/C	RUN CAP
2	ACTIVE
3	START WINDING
N/C	NOT USED
4	COMMON