


CONNECTION DIAGRAM

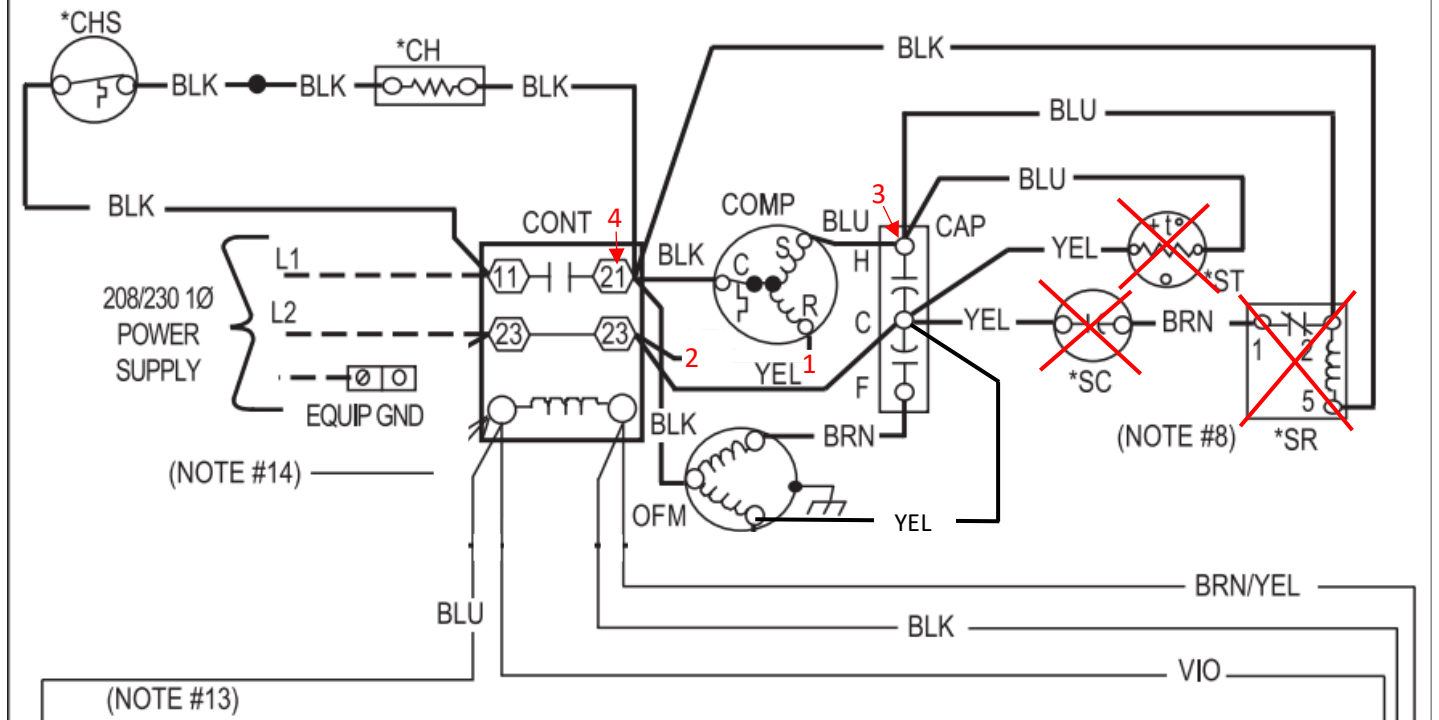

NuStart

- | | |
|-----|---------------|
| 1 | RUN |
| N/C | RUN CAP |
| 2 | ACTIVE |
| 3 | START WINDING |
| N/C | NOT USED |
| 4 | COMMON |