



NuStart	
1	RUN WINDING
N/A	RUN CAPACITOR
2	ACTIVE
3	START WINDING
N/A	NOT USED
4	COMMON