


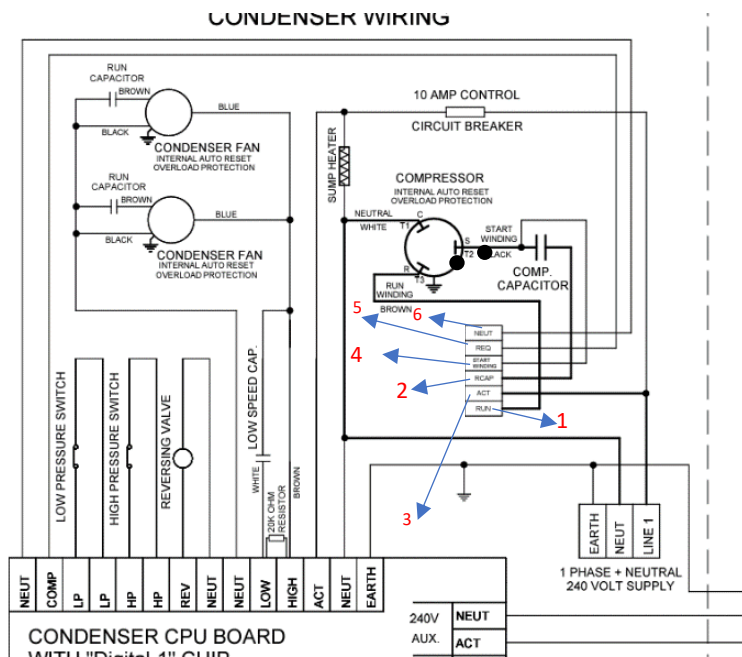

NuStart	
1	RUN WINDING
2	RUN CAP
3	ACTIVE
4	START WINDING
5	ON/OFF
6	NEUTRAL